


Battery House

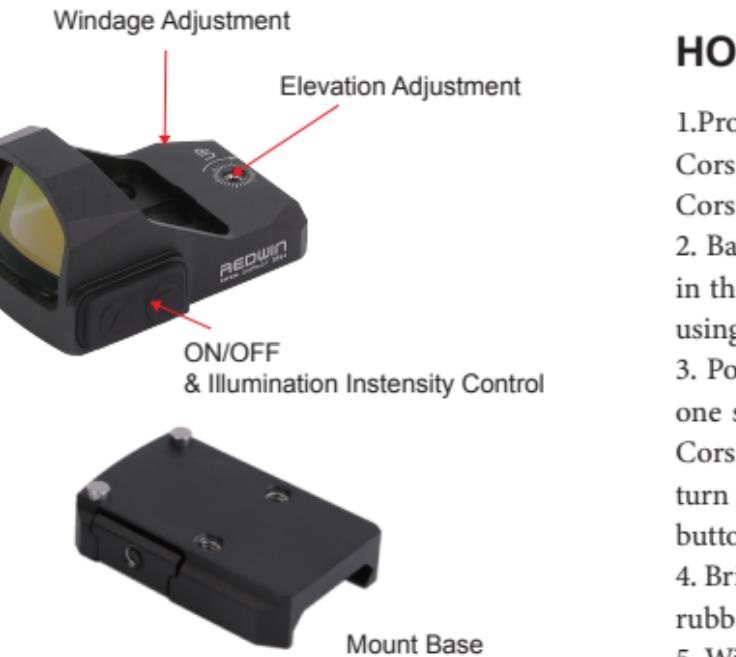

Designed by Red Win Optics
www.redwinoptics.com

HOW TO USE CORSAC 1X24X17

1. Protective Cover Remove cover when using or adjusting your Corsac. Please note that installing the cover does NOT shut the Corsac off.

2. Battery To install, place the battery with numbers facing outward in the circular slot of the battery house. Attach the body to the base using the two attachment screws.

3. Powering Up To turn the Corsac on, press the rubber button "+" one second. The Corsac of Motion Sensor. When you turn on the Corsac, the red dot is shake awake and 2 mins Auto turn off now. To turn the Corsac off absolutely, please press and hold the rubber button "-" three second. And also the Corsac is 4 hours Auto Turn Off.

4. Brightness Adjustment Adjust the illumination intensity using the rubber button

5. Windage and Elevation Adjustment The Corsac features elevation and windage1 click = 1 MOA. Use the allen wrench adjust the Corsac up or down or left or right as indicated by arrows.

MOUNTING CORSAC

1. Attach the low rail mount to the Corsac using the included screws.
2. Attach the Corsac to the Picatinny base rail, making sure the recoil lug is solidly seated in the base groove.
3. Check to see that the clamp is fully down and hooked around the outside of the base.
4. Press the Corsac down and forward toward the muzzle and, using the supplied wrench, firmly tighten down the clamp screw.

SIGHTING IN

After mounting, an initial sight-in of the Corsac at 25 yards will be helpful. Final sight-in should be done at the desired distance (typically 25-50 yards).

1. Fire a three-shot group as precisely as possible at 25 yards.

- Using the center of the three-shot group as a reference, make the necessary adjustments for windage and elevation correction. Using arrows for reference, adjust the Corsac in the direction you wish the group to move. At 25 yards, each dial mark will yield about $\frac{1}{4}$ inch of adjustment.
- 2. Fire a three-shot group at final preferred sight-in distance (25-50 yards).
 - Using the center of the three-shot group as a reference, make the necessary adjustments for windage and elevation correction. Using arrows for reference, adjust the Corsac in the direction you wish the group to move. At 50 yards, each dial mark will yield about $\frac{1}{2}$ inch of adjustment.
- 3. Fire a final three-shot group to confirm proper adjustment. Repeat as necessary.
- Confirm that all mounting screws are snug and tight.

Corsac 1x24x17

CLEANING

The Corsac will require very little routine maintenance other than periodically cleaning the exterior lenses. If desired, the exterior lens may be cleaned by wiping with a soft, dry cloth.

- Be sure to blow away any dust or grit on the lens prior to wiping the surface.
- Using your breath, or a very small amount of water or pure alcohol, can help remove stubborn things like dried water spots.

Trouble shooting

If the red dot does not illuminate, please check the following before returning for service:

- Is the battery oriented correctly? Be sure the battery is installed with the + side facing upwards.
- Is the battery dead? If so, replace the battery.

RED WIN SHIELD



5 Years VIP Warranty



One time FREE Accidental Damage repair service , includes accidental Water Damage and Drop Damage.



Free Two-Way Shipping

Red Win delivers the best model for your money with 100% quality assurance. Red Win promised

1. Within 5 Years of receiving the purchased product, if there is quality problem, it will be replaced or repair for free .
2. Warranty included product problem caused by force majeure (such as fire, flood, earthquake, lightning strike, etc .)
3. Products purchased through offline stores can be exchanged directly at the sales store .

SUPPORT

Thank you for purchasing Red Win products.

Should you have any queries please feel free to contact us at

info@redwinoptics.com or visit www.redwinoptics.com to get more support.

Corsac 1x24x17

RWD-7



RWD-7



Corsac 1x24x17

RWD-7



RWD-7

